

Prepare the patient

- Remove Ametop
- Ask the patient if they would prefer to lie down or be seated

Preparation zone



1
Clean Hands
with alcohol hand
rub or soap & water



2
Clean Work Surface
(e.g. dressing trolley) as
per local policy




3
Collect Equipment
and supplies

Patient zone



4
Apply Apron
(Disposable)

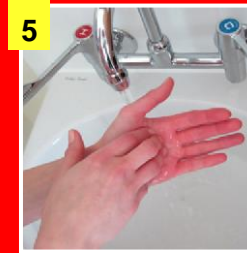

5
Clean Hands
with alcohol hand
rub or soap & water



6
Open Equipment
onto a Critical Aseptic
Field & prepare using the
inside of the waste bag



7
Clean Hands
with alcohol hand
rub or soap & water



8
Apply Sterilized
Gloves



9
Prepare Critical
Aseptic Field using NTT
to protect key-parts
where practical




10
Disinfect skin
using 2% chlorhexidine
/ 70% alcohol applicator
for 30 secs using a cross
hatch method & allow to dry



11
Apply sterilized
drape under
Implantable port site



12
Insert Gripper
needle using NTT

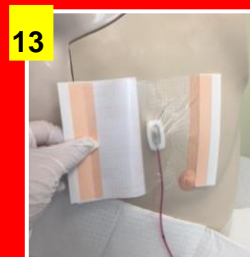

13
Apply Dressing
including fixation
using NTT



14
Dispose of Waste,
remove gloves & apron,
and immediately ...



15
Clean Hands
with alcohol hand
rub or soap & water

Decontamination zone



16
Clean Trolley
according to local
policy.



17
Clean Hands
with alcohol hand
rub or soap & water